

Electronic Classroom Control Diagram

video projector POWER
*to turn off: depress button until device lights flash

VCR ON/OFF

VCR controller buttons function as labeled

volume

device selection buttons
Use these buttons, not lighted indicators, for device selection.

TV channel selectors

This panel, referred to as the RC, is the controller for all presentation equipment in the room. The RC is used to select devices and manipulates some functions of those devices. Use the Quick Guide for proper operation.

The diagram shows an Extron remote control panel with various buttons and indicators. On the left, there is a 'DISPLAY POWER' button with a light indicator and a 'VOLUME' knob with 'MAX' and 'MIN' markings. The central area features a grid of buttons for device selection, including 'PC' and 'VCR', with lighted indicators above and below them. To the right is a 'DVD & VCR CONTROL' section with buttons for 'TITLE', 'MENU', 'ENTER', 'TV/VCR', 'PREV/REW', 'PLAY', 'NEXT/FWD', 'PAUSE', and 'STOP'. A 'TUNER' section with up and down arrows is also present. A legend at the bottom identifies red squares as device selection buttons and blue squares as TV channel selectors. A red circle highlights the 'TV/VCR' button, and a red arrow points from the 'VCR ON/OFF' label to it. The Extron logo is visible at the bottom center of the panel.